

Minimum Requirements of a PC to run Vehicle Explorer.

Please check the specifications of your own PC. To use the system you will require the following:

IBM compatible (PC) computer with;

A Pentium II 266MHz or higher CPU,

A Minimum screen resolution 800x600, 256 colours

60 MB or more free hard drive space

A Built in or external CD ROM drive to install the Vehicle Explorer software from the supplied CD or other method such as direct internet download. USB stick Etc.

A true Serial port (9 pin port) or USB port with USB to serial adapter

Operating systems

Preferred operating systems:

Windows 98SE, ME, NT, 2000 or XP. All English Language versions

Newer operating systems:

i.e Windows Vista, Windows 7, Windows 8, Windows 10. All English language versions

Note: Although many of our customers successfully run Vehicle Explorer on these newer operating system, we have not rigorously tested our software with all of them and in some cases they require advanced knowledge and capabilities. As such, we do not offer any guarantees about the suitability of these, or provide support for customers encountering problems installing and running our Vehicle Explorer software on these.